

## Knowledge Base

# Your SMART Table Displays a Scanning and Fixing Message When You Connect a USB Storage Device

<a href="#">SMART Hardware</a>	SMART Table 230i
<a href="#">Operating Systems</a>	Windows® XP and Windows Vista® operating systems
<a href="#">Other</a>	USB storage devices

## Issue

When you connect a USB storage device to your SMART Table, a “Do you want to scan and fix Removable Disk?” message appears.

## Cause

You saved files on your USB storage device but didn't safely remove the device from your computer.

## Solution

Click **Scan and fix** in the message window.



### TIP

To prevent this message from appearing, safely remove your USB storage device from your computer before connecting the device to your SMART Table.

2 | **KNOWLEDGE BASE – YOUR SMART TABLE DISPLAYS A SCANNING AND FIXING MESSAGE WHEN YOU CONNECT A USB STORAGE DEVICE**

---

**To safely remove a USB storage device from your computer**

1. Click the **Safely Remove Hardware** icon in your computer's notification area.
    -  in Windows XP
    -  in Windows Vista
  2. Select **Safely remove USB Mass Storage Device**.
  3. Remove your USB storage device after the **Safe to Remove Hardware** message appears.
- 

First Published May 1, 2009