

Knowledge Base

The Image Doesn't Fill Your SMART Table's Display

SMART Hardware

SMART Table 230i

Issue

The image doesn't fill your SMART Table's display, or the image is off center.

Symptoms

A dark band appears across the top, bottom or side of your SMART Table's display.

Cause

A mirror or the projector inside your SMART Table isn't aligned properly.

Solution

If the dark band appears at the top or bottom of the display, adjust the lower mirror inside of your SMART Table.

OR

If the dark band appears on the side of the display, adjust the projector position.


2 | **KNOWLEDGE BASE – THE IMAGE DOESN'T FILL YOUR SMART TABLE'S DISPLAY**

To adjust the lower mirror

1. Remove the side panel on the opposite side of the SMART Table's USB connection.
2. Adjust the angle of the lower mirror upward until the image fills the display.

i NOTE

You may have to loosen the side screws that hold the mirror in place.

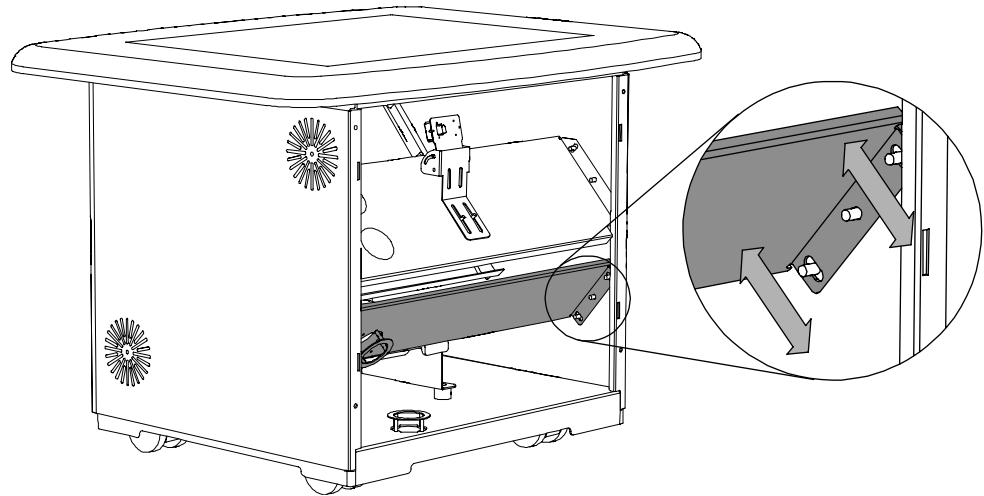


3. Tighten the screws, and then replace the side panel of the cabinet.

3 | **KNOWLEDGE BASE** – THE IMAGE DOESN'T FILL YOUR SMART TABLE'S DISPLAY

To adjust the projector

1. Remove both side panels of the SMART Table cabinet.
2. Loosen the four hex screws that hold the projector mounting plate in place.
3. Adjust the alignment of the projector from left to right until the image is centered on your SMART Table's display.

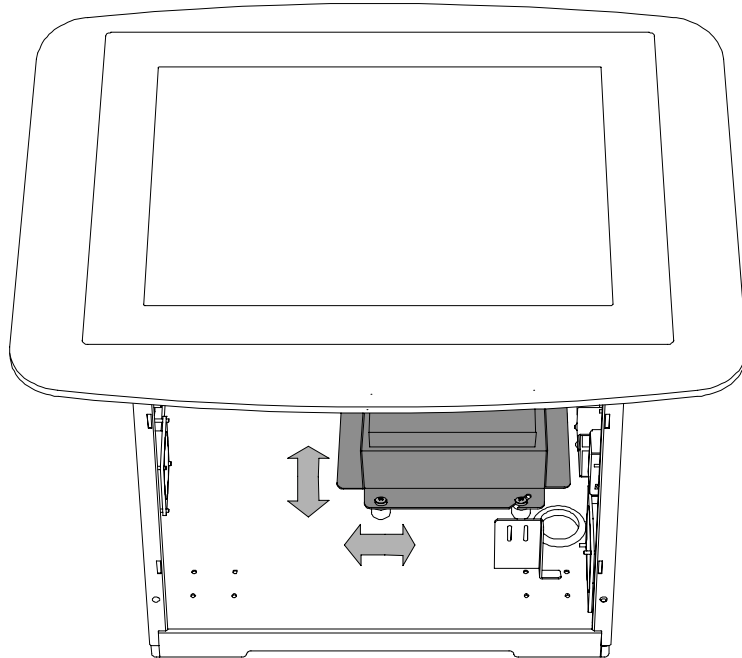

4. Tighten the screws, and then replace the side panels of the cabinet.

First Published May 4, 2009