

Knowledge Base

SMART Table Activities SP1 Applications Don't Appear

SMART Hardware

SMART Table

SMART Software

SMART Table Toolkit 1.1.48.0

Issue

You're unable to view the eight applications in SMART Table activities software SP1: Paint, Media, Multiple Choice, Hot Spots, Addition, Addition Plus, Hot Spaces and Puzzle.

Cause

You updated your software to SMART Table activities 1.1, or you synchronized the activity packs to a setting other than Default.

Solution

Synchronize the Default activity pack by following the steps below:

To synchronize the Default activity pack

1. Turn on your SMART Table.
The SMART Table activities menu appears.
2. Connect a USB storage device to your SMART Table.
The menu changes from **Student** mode to **Teacher** mode.
3. Press **Activity Archives**.
A list of previous activity packs appears.

2 | **KNOWLEDGE BASE** – SMART TABLE ACTIVITIES SP1 APPLICATIONS
DON'T APPEAR

4. Select the **Default** activity pack, and then press **Sync**.

Your SMART Table restores the Default activity pack, and a "Sync Complete!" message appears.

5. Press **OK**.
6. Disconnect the USB storage device.

The menu changes from **Teacher** mode to **Student** mode. All eight applications appear on your SMART Table.

First Published September 14, 2009